

 
4K Action Camera Guide

By Tech General


Scan QR Code to watch the full guide on Youtube
or visit: <https://youtu.be/9ksXD6kxzN8>




Power Button

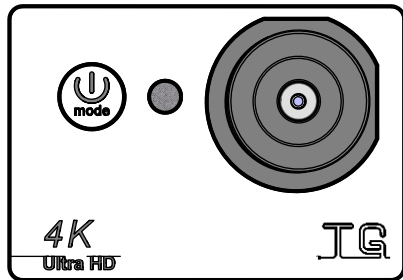

Navigation Button


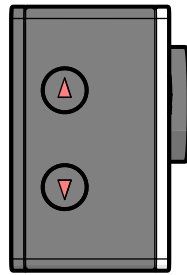


Shutter Button

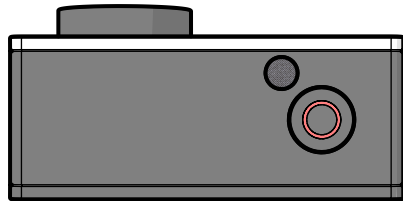


Micro USB Port
Mini HDMI Port
Micro SD Slot


Camera View/Menu

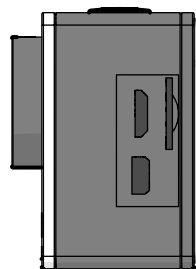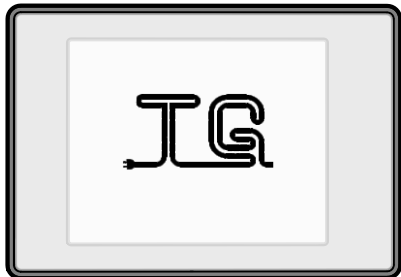

Removing the Camera from the case

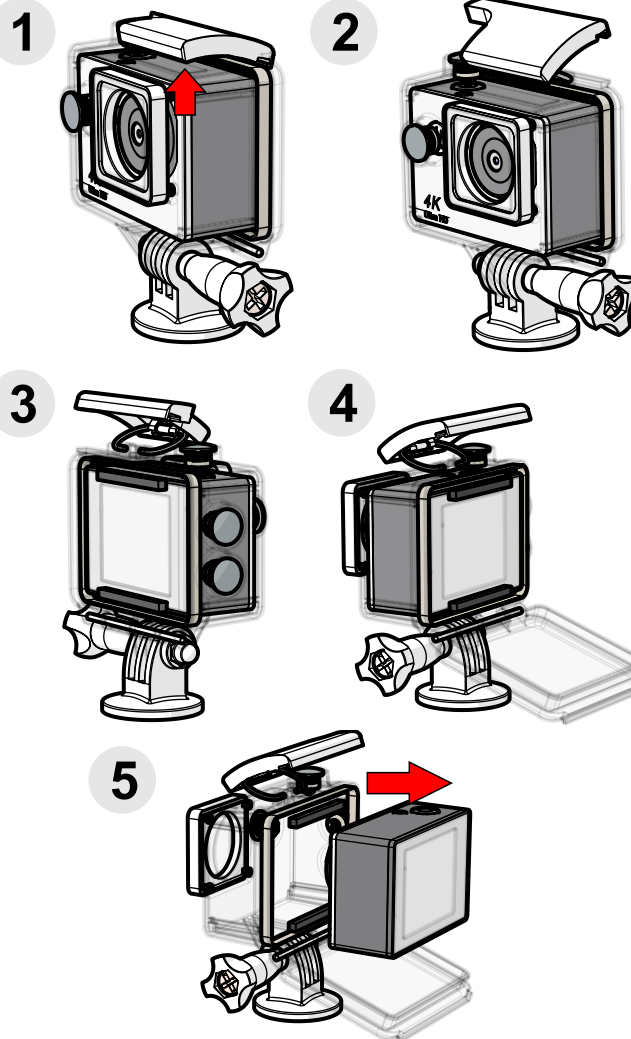

Settings

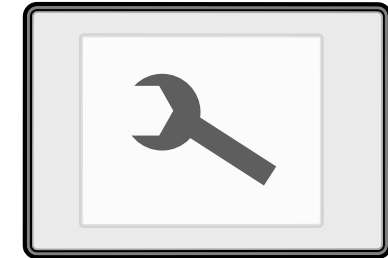

Video Resolution

Choose the quality of the Video Resolution. 4K, 1080p, 720p, etc.

Looping Video

Often used for dash cams, "Looping" continuously records 3 or 5 minute videos. As the memory card is full, the camera deletes the older files so there will always be room for a new file.

Time Stamp

Adds a time stamp (dd/mm/yyyy) on videos recorded.

Exposure

Changes the brightness of the camera. The higher the number (+) the brighter the image, lower the number (-) the darker the image.



www.youtube.com/techgeneral



4K Action Camera Guide

By Tech General

Photo Resolution

Choose the quality of the photo resolution.
12MP, 8MP, 5MP, etc.

Burst Photo

Takes a several shots with a click of a button.

Time Lapse

Choose the time between shots taken for a time lapse.

Continuous Lapse

The camera continuously keeps recording until manually stopped.

Power Frequency

To prevent camera flicker, select the frequency based on your location.

Australia, New Zealand, United Kingdom, India	50 Hz
United States, Canada, Philippines,	60 Hz

https://en.wikipedia.org/wiki/Mains_electricity_by_country

Language

Select the Language for the camera.

Date & Time

Set the Date and Time.

Sound Indicator

Change the volume/Sound in the camera.

Upside Down

Flips the orientation of the screen upside down.

Screen Saver

Select the time it takes until the screen goes off to save battery.

Power Saver

Select the time it takes until the camera powers off.

Format

Formats the SD card for the camera. This will delete your data on the card.


Reset

Resets all the settings to factory.

Version

Shows Action Camera info.

App Connectivity

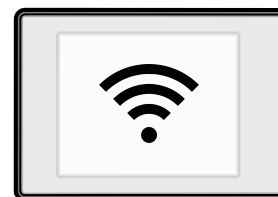

Password: 1234567890

1. On the Action Camera turn on Wifi by pressing the down arrow key. You should see "Waiting for Wifi Connection".
2. On you smart phone, go to settings and select the camera.
3. If required, enter Password; 1234567890
4. Once your phone has connected tot he camera, launch the App.
5. Once you see you camera details select connect.



Download EZ-iCAM or appropriate application on iOS or Android

NOTE Depending on the Cam Model/Brand, it may use a different application.

Exporting Footage

There are 2 Ways to Export your Footage;

Smart Phone: Using the app, you can goto the gallery and save the pictures onto your smart phone.

Micro SD Card: If you have a micro SD card reader, you can insert the card into the reader connected to your computer. You device should show up on "My Computer"

Frequently Asked Questions

Can the camera record sound?

Yes, the cam is capable of recording sound.

Can you zoom in while recording?

Depends on the model/brand, the camera on shown in the video does not.

Can you plug an external microphone?

Yes, as long as you have to correct connection. There is no AUX connector, however you can use a micro USB to AUX adaptor.

Does the camera have night vision?

Current model shown does not.



www.youtube.com/techgeneral