

Microwave Oven

User manual

MS32DG4504A***



SAMSUNG

Contents

Safety instructions 3

Important safety instructions	3
General safety	5
Microwave operation precautions	6
Limited warranty	6
Grounding method	6

Installation 7

Accessories	7
Installation site	7
Turntable	7

Maintenance 8

Cleaning	8
Replacement (repair)	8
Care against an extended period of disuse	8

Oven features 9

Oven	9
Control panel	9

Oven use 10

How a microwave oven works	10
Checking that your oven is operating correctly	10
Setting the time	11
Cooking/Reheating	11
Power levels and time variations	12
Adjusting the cooking time	12
Stopping the cooking	13
Setting the energy save mode	13
Using the Home Dessert features	13

Using the Auto Cook features	16
Using the Power Defrost features	18
Using the Keep Warm features	19
Using the Deodorization features	20
Using the Lock (3 sec) features	20
Using the Favorite features	20
Using the Favorite setting	21
Switching the beeper off	21

Cookware guide 22

Troubleshooting and information code 23

Troubleshooting	23
Information code	25

Technical specifications 25

Safety instructions

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

This appliance is intended to be used in household only and it is not intended to be used such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential

environments;

- bed and breakfast type environments.

Only use utensils that are suitable for use in microwave ovens.

When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

If smoke is observed (emitted), switch off or unplug the appliance and keep the door closed in order to stifle any flames.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

Safety instructions

The oven should be cleaned regularly and any food deposits removed.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

The microwave oven is intended to be used on the counter top (freestanding) use only, the microwave oven shall not be placed in a cabinet.

Metallic containers for food and beverages are not allowed during microwave cooking.

The care should be taken not to displace the turntable when removing containers from the appliance.

The appliance shall not be cleaned with a steam cleaner.

The appliance should not be cleaned with a water jet.

The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This oven should be positioned proper direction and height permitting easy access to cavity and control area.

Before using the your oven first time, oven should be operated with the water during 10 minute and then used.

If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.

The microwave oven has to be positioned so that plug is accessible.

General safety

Any modifications or repairs must be performed by qualified personnel only.

Do not heat food or liquids sealed in containers for the microwave function.

Do not use benzene, thinner, alcohol, or steam or high-pressure cleaners to clean the oven.

Do not install the oven: near a heater or flammable material; locations that are humid, oily, dusty or exposed to direct sunlight or water; or where gas may leak; or an uneven surface.

This oven must be properly grounded in accordance with local and national codes. Regularly use a dry cloth to remove foreign substances from the power plug terminals and contacts.

Do not pull, excessively bend, or place heavy objects on the power cord.

If there is a gas leak (propane, LP, etc) ventilate immediately. Do not touch the power cord.

Do not touch the power cord with wet hands.

While the oven is operating, do not turn it off by unplugging the power cord.

Do not insert fingers or foreign substances. If foreign substances enter the oven, unplug the power cord and contact a local Samsung service centre.

Do not apply excessive pressure or impact to the oven.

Do not place the oven over fragile objects.

Ensure the power voltage, frequency, and current matches the product specifications.

Firmly plug the power plug into the wall socket. Do not use multiple plug adapters, extension cords, or electric transformers.

Do not hook the power cord on metal objects. Make sure the cord is between objects or behind the oven.

Do not use a damaged power plug, power cord, or loose wall socket.

For damaged power plugs or cords, contact a local Samsung service centre.

Do not pour or directly spray water onto the oven.

Do not place objects on the oven, inside, or on the oven door.

Do not spray volatile materials such as insecticide on the oven.

Do not store flammable materials in the oven. Because alcohol vapours can contact hot parts of the oven, use caution when heating food or drinks containing alcohol. Children may bump themselves or catch their fingers on the door. When opening/closing the door, keep children away.

Microwave warning

Microwave heating of beverages may result in delayed eruptive boiling; always use caution when handling the container. Always allow beverages to stand at least 20 seconds before handling. If necessary, stir during heating. Always stir after heating.

In the event of scalding, follow these First Aid instructions:

- 1.** Immerse the scalded area in cold water for at least 10 minutes.
- 2.** Cover with a clean, dry dressing.
- 3.** Do not apply any creams, oils, or lotions.

To avoid damaging the tray or rack, do not put the tray or rack in water shortly after cooking.

Do not use the oven for deep fat frying because the oil temperature cannot be controlled. This could result in a sudden boil over of hot oils.

Microwave oven precautions

Only use microwave-safe utensils. Do not use metallic containers, gold or silver trimmed dinnerware, skewers, etc.

Remove wire twist ties. Electric arcing may occur.

Do not use the oven to dry papers or clothes.

Use shorter times for small amounts of food to prevent overheating or burning.

Keep the power cord and power plug away from water and heat sources.

To avoid the risk of explosion, do not heat eggs with shells or hard-boiled eggs. Do not heat airtight or vacuum-sealed containers, nuts, tomatoes, etc.

Do not cover the ventilation slots with cloth or paper. This is a fire hazard. The oven may overheat and turn off automatically and will remain off until it cools sufficiently.

Always use oven mitts when removing a dish.

Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.

Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.

Do not operate the oven when it is empty. The oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the oven is started accidentally.

Safety instructions

Install the oven in compliance with the clearances in this manual. (See Installing your microwave oven.)

Use caution when connecting other electrical appliances to sockets near the oven.

Do not use this appliance for other purposes than cooking.

Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

Use this appliance only for its intended use as described in the manual.

Do not put corrosive chemicals or vapors in or on this appliance.

This type of oven is specifically designed to heat, cook, or dry food.

It is not designed for industrial or laboratory use.

Microwave operation precautions

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Do not operate the oven with the door open. Do not tamper with the safety interlocks (door latches). Do not insert anything into the safety interlock holes.
- Do not place any object between the oven door and front face or allow food or cleaner residue to accumulate on sealing surfaces. Keep the door and door sealing surfaces clean by wiping with a damp cloth and then with a soft, dry cloth after each use.
- Do not operate the oven if it is damaged. Only operate after it has been repaired by a qualified technician.

Important: the oven door must close properly. The door must not be bent; the door hinges must not be broken or loose; the door seals and sealing surfaces must not be damaged.

- All adjustments or repairs must be done by a qualified technician.

Limited warranty

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit or accessory was caused by the customer. Items this stipulation covers include:

- Door, handles, out-panel, or control panel that are dented, scratched, or broken.
- A broken or missing tray, guide roller, coupler, or wire rack.


Use this oven only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your oven.

Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact a local Samsung service centre or find help and information online at www.samsung.com.

Use this oven for heating food only. It is intended for domestic use only. Do not heat any type of textiles or cushions filled with grains. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the oven.

To avoid deterioration of the oven surface and hazardous situations, always keep the oven clean and well maintained.

Grounding method

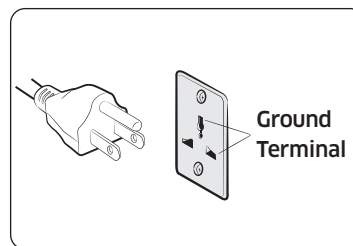

You must plug the product to the grounded outlet.

- Otherwise, there is a risk of electric shock, fire, or product damage.
- If the power outlet is not equipped with a grounded terminal, connect the provided ground wire to the ground conductor.

 
⚠ CAUTION

Do not connect the ground wire to the gas pipe, water pipe, or phone lines.


Installation

Accessories

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.



 - 01 Roller ring**, to be placed in the centre of the oven.
The roller ring supports the turntable.




- 02 Turntable**, to be placed on the roller ring with the centre fitting to the coupler.
The turntable serves as the main cooking surface; it can be easily removed for cleaning.

CAUTION

DO NOT operate the microwave oven without the roller ring and turntable.


Installation site

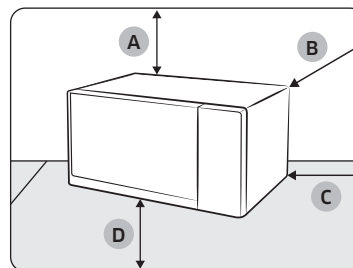

- A.** 20 cm above
B. 10 cm behind
C. 10 cm on the side
D. 85 cm of the floor

- Select a flat, level surface approx. 85 cm above the floor. The surface must support the weight of the oven.
- Secure room for ventilation, at least 10 cm from the rear wall and both sides, and 20 cm from above.
- Do not install the oven in hot or damp surroundings, such as next to other microwave ovens or radiators.
- Conform to the power supply specifications of this oven. Use only approved extension cables if you need to use.
- Wipe the interior and the door seal with a damp cloth before using your oven for the first time.

Turntable

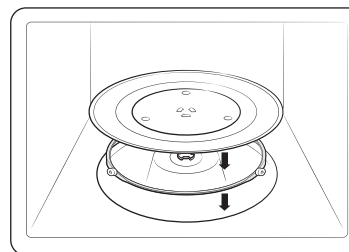

Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.

Maintenance

Cleaning

Clean the oven regularly to prevent impurities from building up on or inside the oven. Also pay special attention to the door, door sealing, and turntable and roller ring (applicable models only).

If the door won't open or close smoothly, first check if the door seals have built up impurities. Use a soft cloth in soapy water to clean both the inner and outer sides of the oven. Rinse and dry well.

To remove stubborn impurities with bad smells from inside the oven

1. With an empty oven, put a cup of diluted lemon juice on the centre of the turntable.
2. Heat the oven for 10 minutes at max power.
3. When the cycle is complete, wait until the oven cools down. Then, open the door and clean the cooking chamber.

To clean inside swing-heater models

CAUTION

- Keep the door and door sealing clean and ensure the door opens and closes smoothly. Otherwise, the oven's lifecycle may be shortened.
- Take caution not to spill water into the oven vents.
- Do not use any abrasive or chemical substances for cleaning.
- After each use of the oven, use a mild detergent to clean the cooking chamber after waiting for the oven to cool down.

Replacement (repair)

WARNING

This oven has no user-removable parts inside. Do not try to replace or repair the oven yourself.


- If you encounter a problem with hinges, sealing, and/or the door, contact a qualified technician or a local Samsung service centre for technical assistance.
- If you want to replace the light bulb, contact a local Samsung service centre. Do not replace it yourself.
- If you encounter a problem with the outer housing of the oven, first unplug the power cord from the power source, and then contact a local Samsung service centre.

Care against an extended period of disuse

- If you don't use the oven for an extended period of time, unplug the power cord and move the oven to a dry, dust-free location. Dust and moisture that builds up inside the oven may affect the performance of the oven.


Oven features

Oven

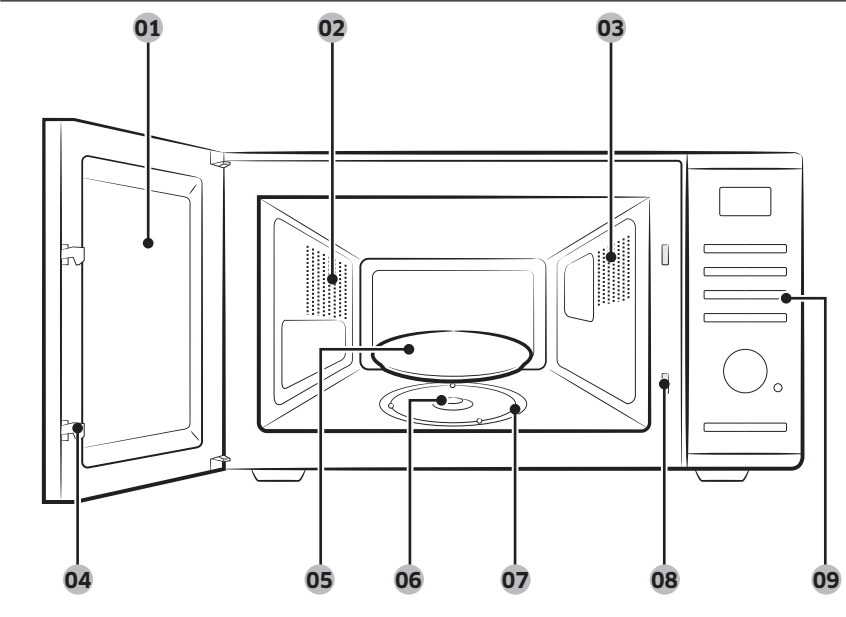

- | | | |
|-----------------|---------------------------|------------------|
| 01 Door | 02 Ventilation holes | 03 Light |
| 04 Door latches | 05 Turntable | 06 Coupler |
| 07 Roller ring | 08 Safety interlock holes | 09 Control panel |

Control panel

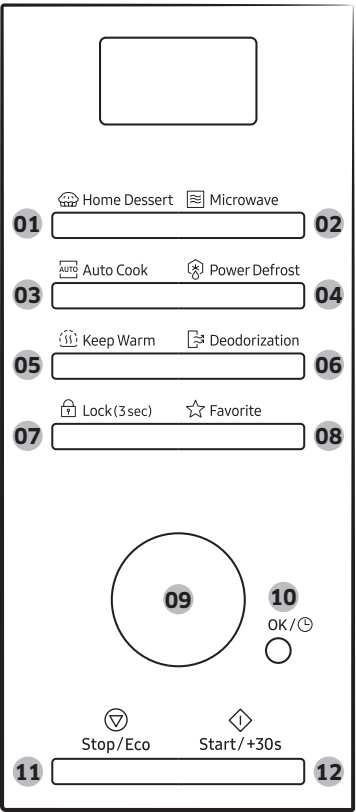

- 01 Home Dessert
- 02 Microwave
- 03 Auto Cook
- 04 Power Defrost
- 05 Keep Warm
- 06 Deodorization
- 07 Lock (3 sec)
- 08 Favorite
- 09 Dial Knob (Weight/Serving/Time)
- 10 OK/Clock
- 11 Stop/Eco
- 12 Start/+30s

Oven use


How a microwave oven works

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.

You can use your microwave oven to:

- Defrost
- Reheat
- Cook

Cooking principle.

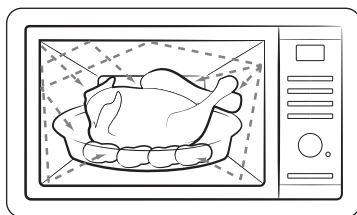

1. The microwaves generated by the magnetron reflected at cavity and are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the container used and the properties of the food:
 - Quantity and density
 - Water content
 - Initial temperature (refrigerated or not)

CAUTION

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:

- Even cooking of the food right to the centre.
- The same temperature throughout the food.

Checking that your oven is operating correctly

The following simple procedure enables you to check that your oven is working correctly at all times. If you are in doubt, refer to the section entitled "**Troubleshooting**" on page 23 to 25.

NOTE

The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum (100 % - 1000 W) is used, the water takes longer to boil.

Open the oven door by pulling the handle on the right side of the door.

Place a glass of water on the turntable. Close the door.



Press the **Start/+30s** button and set the time to 4 or 5 minutes, by pressing the **Start/+30s** button the appropriate number of times. The oven heats the water for 4 or 5 minutes. The water should then be boiling.

Setting the time


When power is supplied, 88:88 and then 12:00 is automatically displayed on the display.

Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

NOTE

Do not forget to reset the clock when you switch to and from summer and winter time.

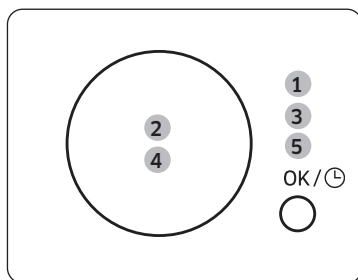

1. To display the time in the...
24-hour notation
12-hour notation
Press the **OK/Clock** button once or twice.
2. Turn the **Dial Knob** to set the hour.
3. Press the **OK/Clock** button.
4. Turn the **Dial Knob** to set the minute.
5. When the right time is displayed, press the **OK/Clock** button to start the clock. The time is displayed whenever you are not using the microwave oven.

Cooking/Reheating

The following procedure explains how to cook or reheat food.


CAUTION

ALWAYS check your cooking settings before leaving the oven unattended.

Open the door. Place the food in the centre of the turntable. Close the door. Never switch the microwave oven on when it is empty.



1. Press the **Microwave** button.
2. Select the appropriate power level by pressing the **Microwave** button again until the corresponding wattage is displayed. Refer to the power level table.

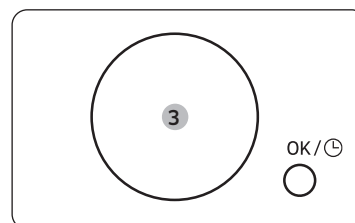

3. Set the cooking time by turning the **Dial Knob**.
The cooking time is displayed.



4. Press the **Start/+30s** button.
The oven light comes on and the turntable starts rotating. Cooking starts and when it has finished.
 - The oven beep and flash End 4 times.
The oven will then beep one time per minute.

Oven use

Power levels and time variations

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity. You can choose between seven power levels.

Power level	Percentage (%)	Output (W)
FULL	100	1000
HIGH	85	850
MEDIUM HIGH	60	600
MEDIUM	45	450
MEDIUM LOW	30	300
DEFROST	18	180
LOW/KEEP WARM	10	100

The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

If you select a...	Then the cooking time must be...
Higher power level	Decreased
Lower power level	Increased

Adjusting the cooking time


You can increase the cooking time by pressing the **Start/+30s** button once for each 30 seconds to be added.

- Check how cooking is progressing at any time simply by opening the door
- Increase the remaining cooking time



To increase the cooking time of your food during cooking, press the **Start/+30s** button once for each 30 seconds that you wish to add.

- **Example:** To add three minutes, press the **Start/+30s** button six times.

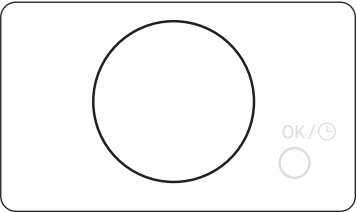

Just turning **Dial Knob** to adjust cooking time.

- To increase cooking time, turn to right and to decrease cooking time, turn to left.

Stopping the cooking


You can stop cooking at any time so that you can:

- Check the food
- Turn the food over or stir it
- Leave it to stand

To stop the cooking...	Then...
Temporarily	Open the door or press the Stop/Eco button once. Cooking stops. To resume cooking, close the door again and press the Start/+30s button.
Completely	Press the Stop/Eco button once. Cooking stops. If you wish to cancel the cooking settings, press the Stop/Eco button again.

Setting the energy save mode

The oven has an energy save mode.

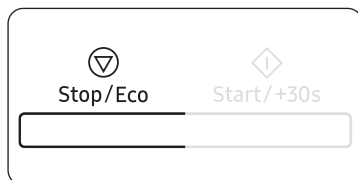

- Press the **Stop/Eco** button.
Display off.
- To remove energy save mode, open the door or press the **Stop/Eco** button and then display shows current time. The oven is ready for use.

NOTE

Auto energy saving function

If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.

Oven Lamp will be turned off after 5 minutes with door open condition.

Using the Home Dessert features

Home Dessert has 10 pre-programmed cook settings. You do not need to set either the cooking times or the power level.


⚠ CAUTION

Use only recipients that are microwave-safe.

Open the door. Place the food in the centre of the turntable. Close the door.



1. Press **Home Dessert**

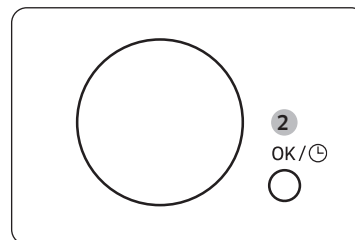

2. Select the type of food that you are cooking by turning the **Dial Knob**, and then press **OK/Clock**.



3. Press **Start/+30s** to start Home Dessert.

- The microwave oven cooks the food according to the selected preprogrammed setting.
- When the cooking is complete, the microwave oven beeps 4 times and the control panel display shows the current time. Then, the end reminder signal beeps once every minute for 3 times.

Oven use

The following table presents quantities and appropriate instructions about 10 pre-programmed cooking options. Those programmes are running with microwave energy only.

Code/Food	Serving Size	Instructions
1 Walnut Pound Cake	1 serving	Ingredients Flour 120 g, Butter 140 g, Black sugar 100 g, Egg 2 pcs., Walnut (Chopped) 50 g, Baking powder 4 g
		1. Combine a butter and black sugar in bowl. 2. Add egg and mix well. 3. Add a flour, baking powder and keep stirring. 4. Add a walnut and mix well. 5. Pour a mixture in greased glass pyrex (Rectangle type W22 x D12 x H7 cm). 6. Put the bowl in the microwave oven and select the Home Dessert [1]. 7. After cooking, stand for 2-3 minutes.
2 Banana Bread	1 serving (6 pcs.)	Ingredients Banana 3 pcs., Pancake mix 120 g, Milk 120 g, Egg 1 pc., Malt syrup 2 tbsp.
		1. Chop the banana. 2. Combine a pancake mix, milk, egg, malt syrup in bowl. 3. Add banana and mix well. 4. Pour a mixture in 6 paper cups. 5. Put paper cups in the microwave oven and select the Home Dessert [2]. 6. After cooking, stand for 2-3 minutes.

Code/Food	Serving Size	Instructions
3 Sponge Cake	1 serving	Ingredients Flour 170 g, Butter 50 g, Sugar 150 g, Egg 3 pcs., Baking powder 10 g
		1. Combine a butter and sugar in bowl. 2. Add egg and mix well. 3. Add a flour, baking powder and keep stirring. 4. Pour a mixture in greased glass(Circle type). 5. Put the bowl in the microwave oven and select the Home Dessert [3]. 6. After cooking, stand for 2-3 minutes.
4 Brownie	1 serving	Ingredients Flour 90 g, Butter(Melted) 100 g, Sugar 230 g, Egg 2 pcs., Cocoa power 40 g
		1. Combine a butter, beaten eggs, sugar in bowl. 2. Add a flour, cocoa powder and keep stirring. 3. Pour a mixture in greased glass pyrex (Rectangle type W22 x D12 x H7 cm). 4. Put the bowl in the microwave oven and select the Home Dessert [4]. 5. After cooking, stand for 20-30 minutes.

Code/Food	Serving Size	Instructions
5 Egg Pudding	1 serving (3 pcs.)	Ingredients Milk 250 g, Sugar 40 g, Egg 2 pcs.
		1. Crack the two eggs into a bowl. Lightly beat the egg with a balloon whisk. Don't let the tip of the whisk leave the bottom of the bowl to avoid creating too much foam. 2. Combine milk, sugar in other bowl. 3. Add the milk to the beaten egg while whisking the mixture. 4. Sieve the egg mixture with a fine mesh strainer. Scrape off the bottom of the strainer with a spatula. Remove any foam on the surface with a spoon. 5. Pour the mixture into custard cups. 6. Put the cups in the microwave oven and select the Home Dessert [5]. 7. After cooking, refrigerate and serve.
6 Chocolate Mug Cake	1 serving	Ingredients Butter 30 g, Sugar 60 g, Egg 1 pc., Heavy cream 40 g, Flour 25 g, Cocoa powder 15 g, Vanilla 1.5 g, Semi-sweet chocolate chips 50 g
		1. Combine the butter, egg and cream together in a mug until well combined. 2. Add the flour, sugar and keep stirring. 3. Add the cocoa, vanilla and stir until just combined. 4. Stir in the chocolate chips. 5. Put the mug(pyrex 500ml) in the microwave oven and select the Home Dessert [6]. 6. After cooking, stand for 2-3 minutes.

Code/Food	Serving Size	Instructions
7 Mug Cake	1 serving	Ingredients Butter 30 g, Sugar 60 g, Egg 1 pc., Flour 50 g, Milk 30 g, Vanilla 6 g, Almond powder 3 g, Baking powder 1.5 g
		1. Combine the butter, egg and milk together in a mug(pyrex 500ml) until well combined. 2. Add the flour, sugar, baking powder and keep stirring. 3. Add the almond powder, vanilla and stir until just combined. 4. Put the mug(pyrex 500ml) in the microwave oven and select the Home Dessert [7]. 5. After cooking, stand for 2-3 minutes.
8 Café Latte	1 serving	Ingredients Instant coffee powder 2 g, Water 50 g, Milk 125 g
		1. Mix the coffee powder and water in mug. 2. Pour milk in other mug. 3. Put the coffee mixture in the microwave oven and select the Home Dessert [8]. 4. When the beeps, take mug out. 5. Put the milk in the microwave oven and press the Start/+30s button. 6. After cooking, mix all well and serve.

Oven use

Code/Food	Serving Size	Instructions
9 Green Tea Latte	1 serving	Ingredients Green tea powder 6 g, Sugar 15 g, Milk 250 g
		1. Mix all ingredients in mug. 2. Put the mug in the microwave oven and select the Home Dessert [9]. 3. After cooking, mix well and serve.
10 Milk Tea	1 serving	Ingredients Black tea bag 2 pcs., Water 60 g, Milk 125 g
		1. Mix the black tea bag and water in mug. 2. Pour milk in other mug. 3. Put the tea mixture in the microwave oven and select the Home Dessert [10]. 4. When the beeps, take mug out. 5. Put the milk in the microwave oven and press the Start/+30s button. 6. After cooking, mix all well and serve.

Using the Auto Cook features

The **Auto Cook** features has 18 pre-programmed cooking times. You do not need to set either the cooking times or the power level.

You can adjust the type of the serving by turning the **Dial Knob**.


NOTE

Use only recipients that are microwave-safe.


First, place the food in the centre of the turntable and close the door.



1. Select the type of food that you are cooking by pressing the **Auto Cook** button once or more times.

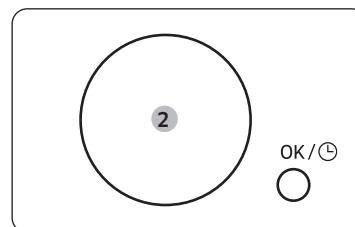

2. Select the size of the serving by turning the **Dial Knob**. (Refer to the table on the side.)

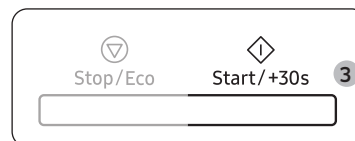

3. Press the **Start/+30s** button.
The food is cooked according to the preprogrammed setting selected.
 - When cooking has finished, the oven will beep and flash End 4 times. The oven will then beep one time per minute.

The following table presents quantities and appropriate instructions about 18 pre-programmed cooking options. Those programmes are running with microwave energy only.

Code/Food	Serving size (g)	Instructions
1 Ready Meal (Chilled)	350	Put on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dishes like potatoes, rice or pasta). Stand for 2-3 minutes.
	450	
2 Vegetarian Meal (Chilled)	350	Put meal on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 2 components (e.g. spaghetti with sauce or rice with vegetables). Stand for 2-3 minutes.
	450	
3 Broccoli Florets	250	Rinse and clean fresh broccoli and prepare florets. Put them evenly into a glass bowl with lid. Add 30 ml (2 tbsp) water when cooking for 250 g. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
	500	
4 Sliced Carrots	250	Rinse and clean carrots and prepare even slices. Put them evenly into a glass bowl with lid. Add 30 ml (2 tbsp) water when cooking for 250 g. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
5 Green Beans	250	Rinse and clean green beans. Put them evenly into a glass bowl with lid. Add 30 ml (2 tbsp) water when cooking 250 g. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.

Code/Food	Serving size (g)	Instructions
6 Spinach	150	Rinse and clean spinach. Put into a glass bowl with lid. Do not add water. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
7 Corn on the Cob	500	Rinse and clean corn on the cob and put into an oval glass dish. Cover with microwave cling film and pierce film. Stand for 1-2 minutes.
8 Peeled Potatoes	250	Wash and peel the potatoes and cut into a similar size. Put them into a glass bowl with lid. Add 45-60 ml (3-4 tbsp) water. Put bowl in the centre of turntable. Cook covered. Stand for 2-3 minutes.
	500	
9 Brown Rice	250	Use a large glass ovenware dish with lid. Add double quantity of cold water (250 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 5-10 minutes.
10 Wholemeal Macaroni	250	Use a large glass ovenware dish with lid. Add 500 ml hot boiling water, a pinch of salt and stir well. Cook uncovered. Stir before standing time and drain thoroughly afterwards. Stand for 1 minutes.
11 Quinoa	250	Use a large glass ovenware dish with lid. Add double quantity of cold water (250 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 1-3 minutes.
12 Bulgur	250	Use a large glass ovenware dish with lid. Add double quantity of cold water (250 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 2-5 minutes.

Oven use

Code/Food	Serving size (g)	Instructions
13 Chicken Breasts	300	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
14 Turkey Breasts	300	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
15 Fresh Fish Fillets	300	Rinse fish and put on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
16 Fresh Salmon fillets	300	Rinse fish and put on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
17 Fresh Prawns	250	Rinse prawns on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
18 Fresh Trout	400	Put 1 fresh whole fish into an ovenproof dish. Add a pinch salt, 1 tbsp lemon juice and herbs. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.


Using the Power Defrost features

The **Power Defrost** features enable you to defrost meat, poultry, fish, bread and cake. The defrost time and power level are set automatically. You simply select the programme and the weight.


NOTE

Use only containers that are microwave-safe.


Open the door. Place the frozen food on a ceramic in the centre of the turntable. Close the door.

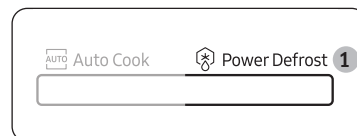

1. Select the type of food that you are cooking by pressing the **Power Defrost** button once or more times.

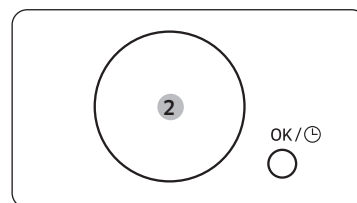

2. Select the size of the serving by turning the **Dial Knob**. (Refer to the table on the side.)

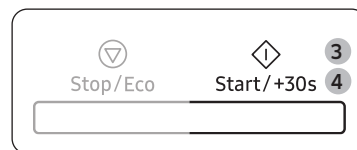

3. Press the **Start/+30s** button.
 - Defrosting begins.
 - The oven beeps through defrosting to remind you to turn the food over.
4. Press the **Start/+30s** button again to finish defrosting.

When cooking has finished, the oven will beep and flash End 4 times. The oven will then beep one time per minute.

The following table presents the various **Power Defrost** programmes, quantities and appropriate instructions.

Remove all kind of package material before defrosting. Place meat, poultry, fish and bread/cake on a flat glass dish or ceramic plate.

Code/Food	Serving Size (g)	Instructions
1 Meat	200-1500	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat. Stand for 20-60 minutes.
2 Poultry	200-1500	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions. Stand for 20-60 minutes.
3 Fish	200-1500	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets. Stand for 20-50 minutes.
4 Bread/Cake	125-1000	Put bread on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door.) This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping. Stand for 5-20 minutes.

Using the Keep Warm features


The **Keep Warm** feature keeps food hot until it's served. Use this function to keep food warm until ready to serve.

NOTE

The maximum **Keep Warm** time is 99 minutes.



1. Press the **Keep Warm** button.

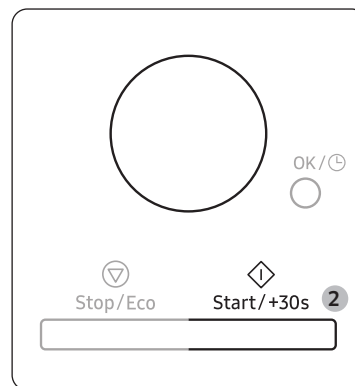

2. Press the **Start/+30s** button.

Result: The 99 minutes is displayed.

- To stop warming the food, open the door or press **Stop/Eco** button.

CAUTION

- Do not use this function to reheat cold foods. This programmes are for keeping food warm that has just been cooked.
- After start keep warm feature, can not change the keep warm time.
- Do not cover with lids or plastic wrap.
- Use oven gloves when taking out food.

Oven use

Using the Deodorization features

Use this features after cooking odorous food or when there is a lot of smoke in the oven interior.

First clean the oven interior.



Press the **Deodorization** button after you have finished cleaning. As soon as you press the Deodorisation button, the operation will start automatically. when it has finished, the oven beeps four times.

NOTE

- The deodorisation time has been specified as 5 minutes. It increases by 30 seconds whenever the **Start/+30s** button is pressed.
- The maximum deodorisation time is 15 minutes.

Using the Lock (3 sec) features

Your microwave oven is fitted with a special child lock programme, which enables the oven to be locked so that children or anyone unfamiliar with it cannot operate it accidentally.



1. Press the **Lock (3 sec)** button.
 - The oven is locked (no functions can be selected).
 - The display shows L.

L



2. To unlock the oven, press the **Lock (3 sec)** button.
 - The oven can be used normally.

Using the Favorite features

If you often cook or reheat the same types of dishes, you can store the cooking times and power levels in the oven's memory, so that you do not have to reset them each order.

You can store two different setting.




1. Set your cooking programme as usual (cooking time and power level) see Cooking/Reheating page again if necessary.

2. Press **Favorite** button.

3. Select the program that you want to save by turning the **Dial Knob**.

P1 : First setting

P2 : Second setting.

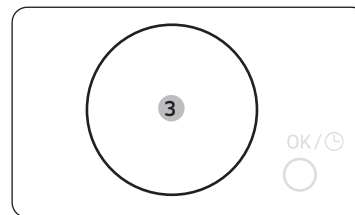

4. Press the **Start/+30s** button.

Result: The food is cooked as requested.

NOTE

Example : If you want to store Microwave mode, Power 600 W and 3 minutes on P1.


1. Press the **Microwave** button.
2. Set the power 600 W by turning **Dial Knob**. And then press the **OK/Clock** button.
3. Set the cooking time 3 minutes by turning the **Dial Knob**.
4. Press **Favorite** button, then select the P1.
5. Press the **OK/Clock** or **Start/+30s** button to finish the setting.

Using the Favorite setting

First, place the food in the centre of the turntable and close the door.



1. Press **Favorite** button

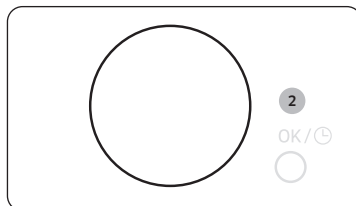

2. Select the program by turning the **Dial Knob**.

P1 : First setting

P2 : Second setting.




3. Press the **Start/+30s** button.

Result: The food is cooked as requested.

Switching the beeper off

You can switch the beeper off whenever you want.

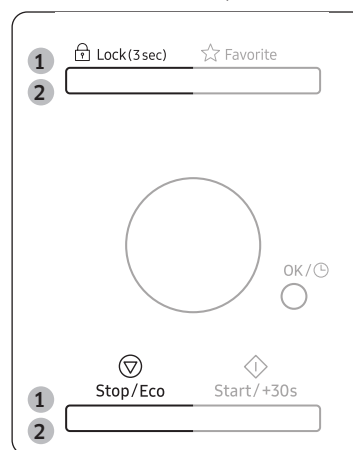

1. Press the **Lock (3 sec)** and **Stop/Eco** button at the same time.
 - The oven does not beep to indicate the end of a function.
2. To switch the beeper back on, press the **Lock (3 sec)** and **Stop/Eco** button again at the same time.
 - The oven operates normally.

Cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Aluminum foil	✓X	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Crust plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	X	May catch fire.
• Recycled paper or metal trims	X	May cause arcing.
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.

Cookware	Microwave-safe	Comments
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	X	May cause arcing or fire.
• Freezer bag twist ties	X	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	X	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓X	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended

✓X : Use caution

X : Unsafe

Troubleshooting and information code

Troubleshooting

If you have any of the problems listed below try the solutions given.

Problem	Cause	Action
General		
The buttons cannot be pressed properly.	Foreign matter may be caught between the buttons.	Remove the foreign matter and try again.
	For touch models: Moisture is on the exterior.	Wipe the moisture from the exterior.
	Child lock is activated.	Deactivate Child lock.
The time is not displayed.	The Eco (power-saving) function is set.	Turn off the Eco function.
The oven does not work.	Power is not supplied.	Make sure power is supplied.
	The door is open.	Close the door and try again.
	The door open safety mechanisms are covered in foreign matter.	Remove the foreign matter and try again.
The oven stops while in operation.	The user has opened the door to turn food over.	After turning over the food, press the Start/+30s button again to start operation.

Problem	Cause	Action
The power turns off during operation.	The oven has been cooking for an extended period of time.	After cooking for an extended period of time, let the oven cool.
	The cooling fan is not working.	Listen for the sound of the cooling fan.
	Trying to operate the oven without food inside.	Put food in the oven.
	There is not sufficient ventilation space for the oven.	There are intake/exhaust outlets on the front and rear of the oven for ventilation. Keep the gaps specified in the product installation guide.
	Several power plugs are being used in the same socket.	Designate only one socket to be used for the oven.
There is a popping sound during operation, and the oven doesn't work.	Cooking sealed food or using a container with a lid may causes popping sounds.	Do not use sealed containers as they may burst during cooking due to expansion of the contents.
The oven exterior is too hot during operation.	There is not sufficient ventilation space for the oven.	There are intake/exhaust outlets on the front and rear of the oven for ventilation. Keep the gaps specified in the product installation guide.
	Objects are on top of the oven.	Remove all objects on the top of the oven.
The door cannot be opened properly.	Food residue is stuck between the door and oven interior.	Clean the oven and then open the door.

Troubleshooting and information code

Problem	Cause	Action
Heating including the Warm function does not work properly.	The oven may not work, too much food is being cooked, or improper cookware is being used.	Put one cup of water in a microwave-safe container and run the microwave for 1-2 minutes to check whether the water is heated. Reduce the amount of food and start the function again. Use a cooking container with a flat bottom.
The thaw function does not work.	Too much food is being cooked.	Reduce the amount of food and start the function again.
The interior light is dim or does not turn on.	The door has been left open for a long time.	The interior light may automatically turn off when the Eco function operates. Close and reopen the door or press the Stop/Eco button.
	The interior light is covered by foreign matter.	Clean the inside of the oven and check again.
A beeping sound occurs during cooking.	If the Auto Cook function is being used, this beeping sound means it's time to turn over the food during thawing.	After turning over the food, press the Start/+30s button again to restart operation.
The oven is not level.	The oven is installed on an uneven surface.	Make sure the oven is installed on flat, stable surface.
There are sparks during cooking.	Metal containers are used during the oven/thawing functions.	Do not use metal containers.

Problem	Cause	Action
When power is connected, the oven immediately starts to work.	The door is not properly closed.	Close the door and check again.
There is electricity coming from the oven.	The power or power socket is not properly grounded.	Make sure the power and power socket are properly grounded.
1. Water drips. 2. Steam emits through a door crack. 3. Water remains in the oven.	There may be water or steam in some cases depending on the food. This is not an oven malfunction.	Let the oven cool and then wipe with a dry dish towel.
The brightness inside the oven varies.	Brightness changes depending on power output changes according to function.	Power output changes during cooking are not malfunctions. This is not an oven malfunction.
Cooking is finished, but the cooling fan is still running.	To ventilate the oven, the cooling fan continues to run for about 3 minutes after cooking is complete.	This is not an oven malfunction.

Technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MS32DG4504A***
Power source	230 V ~ 60 Hz AC
Power consumption Microwave	1500 W
Output power	100 W / 1000 W - 7 levels (IEC-705)
Operating frequency	2450 MHz
Dimensions (W x H x D) Outside (Include Handle) Oven cavity	517 x 297 x 424 mm 357 x 255 x 357 mm
Volume	32 liter
Weight Net	14.6 kg approx.

Problem	Cause	Action
Turntable		
While turning, the turntable comes out of place or stops turning.	There is no roller ring, or the roller ring is not properly in place.	Install the roller ring and then try again.
The turn table drags while turning.	The roller ring is not properly in place, there is too much food, or the container is too large and touches the inside of the microwave.	Adjust the amount of food and do not use containers that are too large.
The turn table rattles while turning and is noisy.	Food residue is stuck to the bottom of the oven.	Remove any food residue stuck to the bottom of the oven.

Information code

Information code	CAUSE	Action
SE	Control buttons are pressed over 10 seconds.	Clean the keys and check if there is water on the surface around key. If it occurs again, turn off the microwave oven over 30 seconds and try setting again. If it appears again, call your local SAMSUNG Customer Care Centre.

NOTE

If the suggested solution does not solve the problem, contact your local SAMSUNG Customer Care Centre.

Memo

Memo

QUESTIONS OR COMMENTS?

COUNTRY / LOCATION	CALL	OR VISIT US ONLINE AT
CHINA	400-810-5858 (B2C) 400-610-5858 (B2B)	www.samsung.com/cn/support
TAIWAN	0800-32-9999 (All Product) 0809-00-5237 (B2B / Dealer)	www.samsung.com/tw/support
HONG KONG	3698 4698 (All Product) 3698 4688 (B2B)	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
MACAU	0800 333	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
SINGAPORE	1800 7267864 1800-SAMSUNG (All)	www.samsung.com/sg/support
AUSTRALIA	1300 362 603 (Other)	www.samsung.com/au/support
NEW ZEALAND	0800 726 7864 (All Products) 0800 726 786 (All Products) both numbers are linked with same line	www.samsung.com/nz/support
VIETNAM	Zalo Samsung Vietnam https://zalo.me/598843366637438151 	www.samsung.com/vn/support
THAILAND	Hotline no : 1282 1800-29-3232 (Toll free for all product)	www.samsung.com/th/support
MYANMAR	(General) +95-9-771-001-777 (VIP) +95-9-771-007-771	www.samsung.com/mm/support

COUNTRY / LOCATION	CALL	OR VISIT US ONLINE AT
CAMBODIA	1800-20-3232 (Toll free)	www.samsung.com/th/support
LAOS	+856-214-17333	www.samsung.com/th/support
MALAYSIA	1800-88-9999 (OTH) +603-7713 7420 (Overseas contact)	www.samsung.com/my/support
INDONESIA	021-5699-7777 0800-112-8888 (All Product, Toll Free) 0800-112-7777 (All Product, Toll Free)	www.samsung.com/id/support
PHILIPPINES	All Products : 1-800-10-7267864 [PLDT-Toll Free] 1-800-8-7267864 [Globe-Toll Free] 84222111 [Landline]	www.samsung.com/ph/support
JAPAN	0120-363-905	www.samsung.com/jp/support
INDIA	1800 5 SAMSUNG (1800 5 7267864) (Toll-Free) 1800 40 SAMSUNG (1800 40 7267864) (Toll-Free)	www.samsung.com/in/support
NEPAL	16600172667 (Toll Free for NTC Only) 9801572667 (Toll Free for Ncell users)	www.samsung.com/in/support/contact-us-nepal/
BANGLADESH	08000-300-300 (Toll free) 09612-300-300	www.samsung.com/bd/support
SRI LANKA	011 SAMSUNG (011 7267864)	www.samsung.com/in/support/contact-us-srilanka/

