 


BLAKK™

Electric Oven Manual

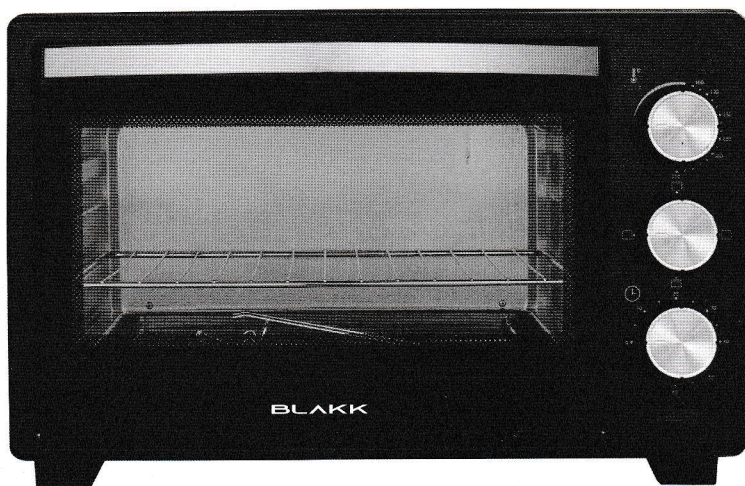

KSEO30LBLK
30L electric oven

portable bluetooth speaker

Please read the instruction manual before
operating the unit.

IMPORTANT SAFEGUARDS

These precautions are crucial for safe operation of electrical appliances. Here's a breakdown of each point for clarity:

- **Read all instructions**

Familiarize yourself with the appliance's manual to understand its operation and safety features.

- **Do not touch hot surfaces**

Avoid direct contact with any part of the appliance that becomes hot to prevent burns.

- **Close supervision near children**

Always keep an eye on children when they are near appliances to prevent accidents.

- **Prevent electric shock**

Avoid immersing electrical components in water or other liquids.

- **Manage cords safely**

Ensure that cords are not hanging over edges or touching hot surfaces to prevent damage or accidents.

- **Check for damage**

Do not use appliances with damaged cords or plugs; get them repaired by an authorized service center.

- **Avoid extreme heat sources**

Keep appliances away from hot gas burners, electric burners, ovens, or microwave ovens.

- **Ensure proper ventilation**

Maintain at least four inches of space around the oven to allow for adequate airflow.

- **Unplug when not in use**

Disconnect the appliance when you're done using it or before cleaning it. Allow it to cool before handling.

- **Disconnect safely**

Turn the control to OFF before unplugging, and always handle the plug, not the cord.

- **Handle hot liquids carefully**

Exercise caution when moving appliances containing hot oil or liquids to avoid spills and burns.

- **Avoid metal foil**

Do not cover any part of the oven with metal foil as it can cause overheating.

- **Care with hot grease**

Be cautious when removing trays or disposing of hot grease or liquids to prevent burns.

- **Avoid metal scouring pads**

Use non-metal cleaning materials to avoid damaging the appliance or causing a short circuit.

- **Do not leave unattended**

Never leave the appliance alone while it is broiling or toasting to prevent potential fire hazards.

- **Use appropriate utensils**

Avoid inserting oversized foods or metal utensils which can cause fires or electric shocks.

- **No inflammable materials**

Do not place any items on or cover the appliance with flammable materials to prevent fire.

- **Caution with non-metal or non-glass containers**

Be careful when using containers that are not metal or glass as they may not be safe for the appliance.

- **Do not use inappropriate materials**

Avoid placing cardboard, plastic, or paper in the oven as they can catch fire.

- **Proper storage**

Only store manufacturer-recommended accessories in the oven to avoid potential hazards.

IMPORTANT SAFEGUARDS

- **Wear protective gloves**

Use insulated oven gloves when handling hot items to protect your hands from burns.

- **Follow intended use**


Use the appliance only for its intended purpose to ensure safety and proper functioning.

- **Household use only**

This appliance is designed for home use and should not be used for commercial purposes.


UNIT PARTS IDENTIFICATION

1. Power light
2. Timer dial
3. Selector dial
4. Thermostat dial
5. Door handle
6. Wire rack
7. Bake pan
8. Pan handle
9. Heating elements
10. Door clips

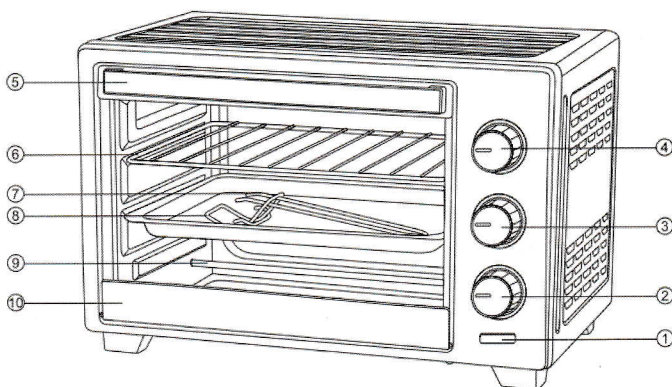


HEATING SELECTOR DIAL

 1. OFF
2. Top heating
3. Bottom heating
4. Top & Bottom heating

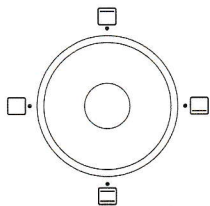


TIMER DIAL

 When timer is turned on, oven on work.
When timer is turned off, oven not work.

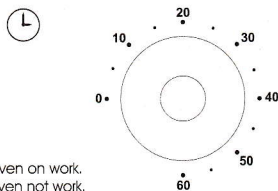

TEMPERATURE DIAL

100°C - 250°C

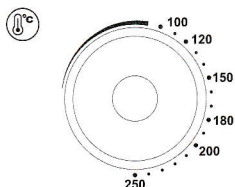

BEFORE USE

- **Ventilation**

Ensure there is adequate space around the oven to allow for proper air circulation. This prevents overheating and ensures efficient operation. Typically, a minimum of four inches of space on all sides is recommended.

- **Dry Surface**

Make sure the oven is completely dry before using it. Moisture can cause electrical components to malfunction or lead to electric shocks.

- **Heat-Resistant Surface**

Place the oven on a heat-resistant surface to avoid damage. Avoid using untreated wooden surfaces, as they may be damaged by heat or moisture from the appliance.

- **Cleaning Marks**

If the feet of the oven leave marks on the table, clean these marks with a damp cloth. This will help maintain the appearance of your furniture and ensure no residue remains that could affect the oven's stability.

OVEN USE

- **Set the Temperature**

Turn the thermostat dial clockwise to the desired temperature. This sets the cooking temperature for your oven.

- **Set the Timer**

Turn the timer dial clockwise to set the cooking time. This will allow the oven to cook for the specified duration.

- **Power Indicator**

The power light will turn on once you've set the timer and the oven is operational. It will go out when the timer is turned to OFF.

- **Timer Alerts**

When the set cooking time is over, the timer will automatically shut off, and a bell will ring to alert you that cooking is complete.

- **Manual Timer Reset**

If you finish cooking before the timer goes off, turn the timer dial back to OFF to stop the oven and prevent overcooking.

- **Initial Use Smoke**

During the first use, you might notice some light smoke coming from the oven. This is normal due to protective oil on the heating elements. The smoke should disappear within 5-10 minutes.

- **Pre-Heating**

For optimal cooking results, preheat the oven for about 10-15 minutes before placing your food inside. This ensures even cooking and better performance.

GRILL COOKING

- **Open the Door**

Leave the oven door slightly open while grilling.
This helps prevent overheating and ensures proper air circulation.

- **Set the Grill Mode**

Turn the selector dial to the GRILL setting.
This activates the top heating element for grilling.

- **Adjust the Temperature**

Set the temperature dial to 250°C.
This is a high temperature suitable for grilling.

- **Set the Timer**

Turn the timer dial to your desired grilling time.
This will control how long the oven remains in grill mode.

- **Finish Cooking**

Once the grilling time is complete, turn the timer dial back to OFF to stop the oven and turn off the grill function.

AFTER USE

- **Turn Off the Timer**

Set the timer dial back to OFF to ensure the appliance stops running.

- **Switch Off the Selector**

Turn the selector dial to OFF to deactivate the cooking or grilling mode.

- **Unplug the Appliance**

Disconnect the oven from the electrical outlet to ensure safety and prevent any electrical hazards.

- **Cool Down**

Wait until the oven is completely cool before beginning any cleaning or maintenance.
This helps prevent burns and ensures that any cleaning agents used do not interact with hot surfaces.

CLEANING INSTRUCTIONS

- **Unplug and Cool Down**

Always unplug the appliance from the outlet and allow it to cool completely before cleaning.
This prevents electrical hazards and avoids burns from hot surfaces.

- **Avoid Immersion**

Do not immerse the appliance in water. Immersing electrical appliances can cause damage and pose safety risks.

- **Wipe Surfaces**

Use a clean, damp cloth to wipe down all exterior surfaces of the appliance.
This removes dust and residue without damaging the appliance.

- **Address Stains**

If stains remain after wiping with a damp cloth, use mild soap with water.
Apply the soap to the cloth, not directly to the appliance, to avoid excessive moisture.

- **Avoid Abrasive Cleaners**

Do not use abrasive cleaners or sharp utensils, as these can scratch or damage the appliance's surfaces.

- **Clean the Interior**

Clean the interior chamber with a clean, damp cloth.
Ensure that no moisture gets into electrical components or heating elements.

PRODUCT SPECIFICATION

Model	KSEO30LBLK
Rated voltage	230V, 60Hz
Rated power	1600W
Capacity	30L
Product size	505 x 363 x 313mm
Net weight	6.32kg
Gross weight	7.29kg

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

This appliance is intended to be used in household and similar application areas in shops, offices and other working environments.

Farm houses by clients in hotel, motels and other residential type environments.

Bed and breakfast type environments.

WARRANTY

WARRANTY REGISTRATION

PRODUCT	SERIAL NUMBER
MODEL	DATE OF PURCHASE
OWNER'S NAME	MOBILE NUMBER
EMAIL ADDRESS	CONTACT NUMBER
ADDRESS	
DEALER'S STORE NAME	SALE'S PERSON NAME
INVOICE/TRANSACTION NUMBER	

By accomplishing this registration, I agree to the terms and conditions in the Warranty Certificate.

WARRANTY CERTIFICATE

PRODUCT	SERIAL NUMBER
MODEL	DEALER AND DATE OF PURCHASE

Your unit and components contained therein are fully warranted against defective material and manufacturing faults under our product warranty guide from the date of purchase. To obtain warranty protection, notice of the alleged defects must be given promptly upon discovery and this warranty must be presented with dated proof of purchase (tax invoice / receipt) to our service personnel at the time of service. This warranty is not valid unless the owner / buyer of this unit shall return, within 7 days of purchase, send the "Warranty Registration" portion of this warranty card duly completed to BLAKK™ for registration.

Our decision on all questions relating to complaints as a result of defects, either workmanship or materials, shall be conclusive and you shall agree to abide by such a decision. The terms and conditions of this warranty shall be contained exclusively in this document and no other presentation of provision, either written or otherwise, regardless of the origin of the same, shall be accepted as either adding or subtracting from these terms and conditions. By submitting your unit for repair, you are deemed to have waived any claims of compensation, monetary or otherwise, which you may be entitled to and are deemed to agree to accept any compensation whatsoever, by way of additional repair or otherwise, which in our absolute discretion we may deem fit to offer. The giving of compensation under this paragraph shall be subject to the provisions in this warranty.

In addition to the above, our service personnel reserve all rights to refuse to attend to any equipment installed in inaccessible locations or installed at places where air is exposed to chemical fumes or workman problems are found. BLAKK™ reserves the right to charge a service fee for out of warranty repair / service of any nature and shall not be deemed liable if the conditions are not met.

The following are not covered under this warranty:

1. Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modification, unauthorized connections, unauthorized repair, misuse, abuse, accident, alteration, improper installation, or other acts of which are not the fault of BLAKK™, including damage caused by shipping, blown fuses, spillage of food and liquids. Improper repair includes use of parts not approved or specified by BLAKK™.
2. Damage to the product caused by accidents, pests and vermin, lightning, wind, losses, defects or malfunction as a result of fire, flood or other Acts of God.
3. Normal wear-and-tear, corrosion, rusting or stains.
4. Defects & damage arising from improper testing, operation, demonstration, maintenance, installation, adjustment or any alteration or modification of any kind.
5. Failure of product to perform during power failures and interruptions or inadequate electrical service or damages due to power fluctuation.
6. Damage caused by leaky or broken water pipes, frozen water pipes, restricted drain lines, inadequate or interrupted water supply or inadequate supply of air.
7. Scratches & damage to the outer surface areas and externally exposed parts that are due to normal customer use.
8. General maintenance & routine servicing.
9. Claims for damaged / missing parts or accessories.
10. If any part or parts of the unit are replaced with a part or parts not supplied or approved by us or the unit has been dismantled or repaired by any person other than a BLAKK™ authorized technician.
11. Any equipment / product which has its serial number removed or made illegible / tampered.
12. If the warranty card is being altered, defaced or erased in any manner whatsoever.

Maximum

Size: 10.25" or 26cm x
14.25" or 36cm

BLAKKTM

Imported and Distributed by:
Holma Philippines Inc.
Unit 3G Srata Views 306 P Guevarra St.
Santa Lucia San Juan Philippines 1500

WARRANTY

WARRANTY REGISTRATION

PRODUCT	SERIAL NUMBER
MODEL	DATE OF PURCHASE
OWNER'S NAME	MOBILE NUMBER
EMAIL ADDRESS	CONTACT NUMBER
ADDRESS	
DEALER'S STORE NAME	SALE'S PERSON NAME
INVOICE/TRANSACTION NUMBER	

By accomplishing this registration, I agree to the terms and conditions in the Warranty Certificate.

WARRANTY CERTIFICATE

PRODUCT	SERIAL NUMBER
MODEL	DEALER AND DATE OF PURCHASE

Your unit and components contained therein are fully warranted against defective material and manufacturing faults under our product warranty guide from the date of purchase. To obtain warranty protection, notice of the alleged defects must be given promptly upon discovery and this warranty must be presented with dated proof of purchase (tax invoice / receipt) to our service personnel at the time of service. This warranty is not valid unless the owner / buyer of this unit shall return, within 7 days of purchase, send the "Warranty Registration" portion of this warranty card duly completed to BLAKK™ for registration.

Our decision on all questions relating to complaints as a result of defects, either workmanship or materials, shall be conclusive and you shall agree to abide by such a decision. The terms and conditions of this warranty shall be contained exclusively in this document and no other presentation of provision, either written or otherwise, regardless of the origin of the same, shall be accepted as either adding or subtracting from these terms and conditions. By submitting your unit for repair, you are deemed to have waived any claims of compensation, monetary or otherwise, which you may be entitled to and are deemed to agree to accept any compensation whatsoever, by way of additional repair or otherwise, which in our absolute discretion we may deem fit to offer. The giving of compensation under this paragraph shall be subject to the provisions in this warranty.

In addition to the above, our service personnel reserve all rights to refuse to attend to any equipment installed in inaccessible locations or installed at places where air is exposed to chemical fumes or workman problems are found. BLAKK™ reserves the right to charge a service fee for out of warranty repair / service of any nature and shall not be deemed liable if the conditions are not met.

The following are not covered under this warranty:

1. Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modification, unauthorized connections, unauthorized repair, misuse, abuse, accident, alteration, improper installation, or other acts of which are not the fault of BLAKK™, including damage caused by shipping, blown fuses, spillage of food and liquids. Improper repair includes use of parts not approved or specified by BLAKK™.
2. Damage to the product caused by accidents, pests and vermin, lightning, wind, losses, defects or malfunction as a result of fire, flood or other Acts of God.
3. Normal wear-and-tear, corrosion, rusting or stains.
4. Defects & damage arising from improper testing, operation, demonstration, maintenance, installation, adjustment or any alteration or modification of any kind.
5. Failure of product to perform during power failures and interruptions or inadequate electrical service or damages due to power fluctuation.
6. Damage caused by leaky or broken water pipes, frozen water pipes, restricted drain lines, inadequate or interrupted water supply or inadequate supply of air.
7. Scratches & damage to the outer surface areas and externally exposed parts that are due to normal customer use.
8. General maintenance & routine servicing.
9. Claims for damaged / missing parts or accessories.
10. If any part or parts of the unit are replaced with a part or parts not supplied or approved by us or the unit has been dismantled or repaired by any person other than a BLAKK™ authorized technician.
11. Any equipment / product which has its serial number removed or made illegible / tampered.
12. If the warranty card is being altered, defaced or erased in any manner whatsoever.