

Safety and Important Information

Read me first!

The important notice and the safety precautions that you should know are described in this manual.

Please keep this information in hand for future reference.

The latest information of the product is available at Canon local website.

■ Caution for each safety standard mark and declaration

Each safety standard mark and declaration is valid only for the voltage and frequency of the respective country or region where it applies.

⚠ Safety Precautions

Please read these safety warnings to ensure that you use the printer safely. Do not attempt to use the printer in any way not described here or in the accompanying manuals. This may cause unexpected accident, fire, or electric shock.

Refer to the Basic Manual as well for other precautions not specified in this manual.

⚠ Warning

The following are instructions that, if ignored, could result in death or serious personal injury caused by incorrect operation of the equipment. These must be observed for safe operation.

⚠ Caution

The following are instructions that, if ignored, could result in personal injury or material damage caused by incorrect operation of the equipment. These must be observed for safe operation.

⚠ Warning

Keep in mind that ignorance of following avoidable acts may lead to fire or electrical shock.

- Placing product close to the flammable solvents such as alcohol or thinner.
- Use of power cord and/or cable other than the one supplied.
- Plugging in the power cord to voltages other than specified.
- Plugging the power cord incompletely such as half the way.
- Plugging in and unplugging the power cord with wet hands.
- Use of damaged cords caused by pulling, twisting, tying or excessively bending.
- Placing heavy objects on the cord.
- Using bundled or knotted power cord.
- Connecting excessive numbers of plugs into one electrical outlet. Using multiple extension cords.
- Leaving power cord plugged in while lightning.
- Plugging in the cables and power cord during cleaning. Using flammable spray or liquids such as alcohol or thinners for cleaning. Wipe it with a soft dry cloth instead.
- Taking apart or modifying the product and accessories.

Unplug the power cord once a month to see if power cord/plug shows anything unusual such as heat, rust, bent, scratch, split and so on.

Unplug the cord/plug and call for service if above is observed since they may lead to a fire or an electric shock afterwards.

If you hear unusual noises, see smoke, feel excessive heat, smell anything unusual, drop metallic part or spill liquid into the product, immediately unplug the power cord and call for service. Continued use of the product may result in fire or electrical shock.

Caution

■ **Handling Ink Bottle**

- Keep out of reach of children.
- **Do not drink ink.**
- Be careful not to get any ink in your eyes or in your mouth. (In case of eye contact or swallowing, rinse with water and contact a doctor immediately.)
- When you store ink bottles, close bottle caps completely and place bottles in standing position. If the ink bottles are laid down, ink may leak.
- When refilling ink tanks, take sufficient care to prevent ink from spattering onto surroundings.
- Ink may stain clothes or other belongings permanently. Washing may not remove ink stains.
- Do not use ink bottles and ink contained therein except to refill tanks of printers specified by Canon.
- Do not mix ink with water or other ink. This may damage the printer.

■ **In Reference to Manual Configuration**

1 Paper manual for setup

Read This Manual for the Installation

2 Basic Manual / Online Manual

Read These Manuals for the Operation

- Basic Manual is a manual which will be available after the installation of setup CD is completed. It provides basic operation of the product and its specification, system requirements, maintenance tips, regulatory, environment, safety and other need to know information. Regulatory information is available from the top-page of this Basic Manual.
- Online Manual is the browser based manual over the internet. Please read this manual for the latest detail information on how to operate the software, troubleshooting, and so on.

■ **General Notices**

The rating plate is located on the bottom of the product.

■ **Precaution for Using This Product in Countries or Regions other than where It was Purchased**

This product, which is made for countries or regions where it was purchased, may not be used in other countries or regions due to their local laws and regulations.

Please note that Canon should not be liable for penalties which will be caused by using this product in such countries or regions.

■ **About Consumables**

Consumables (ink tanks / FINE Cartridges) are available for 5 years after production of the printer has stopped.

■ **When repairing, lending, or disposing of the printer**

If you have entered personal data, passwords and/or other security settings on the printer, such information may be stored in the printer.

To prevent third parties from accessing such information, be sure to reset the settings (restore the default settings) when sending the printer temporarily for repair or lending, transferring the printer to another person or disposing of the printer.

For the steps to reset the settings, see "When repairing, lending, or disposing of the printer" in Online Manual.

■ **Safety-Related Symbols**

Moving parts on the printer are indicated with this mark. Keep hands and fingers away from these parts.



Moving parts

Keep body parts away from moving parts.
Keep body parts out of the motion path.
Some models may not have these parts.

■ Specifications

General Specifications

Printing resolution (dpi)	4800 (horizontal) x 1200 (vertical)
Interface	USB Port: Hi-Speed USB
Print width	203.2 mm / 8 inches (for Borderless Printing: 216 mm / 8.5 inches)
Operating environment	Temperature: 41 to 95 °F (5 to 35 °C) Humidity: 10 to 90 % RH (no condensation) Recommended conditions: Temperature: 59 to 86 °F (15 to 30 °C) Humidity: 10 to 80 % RH (no condensation)
Storage environment	Temperature: 32 to 104 °F (0 to 40 °C) Humidity: 5 to 95 % RH (no condensation)
Power supply	AC 100-240 V, 50/60 Hz (The supplied power cord is only for the country or region you purchased.)
Power consumption	Printing (copy): 9 W max. Standby (minimum): 0.6 W max. OFF: 0.2 W max.
External dimensions	Approx. 445 (W) x 330 (D) x 163 (H) mm Approx. 17.6 (W) x 13 (D) x 6.5 (H) inches
Weight	Approx. 6.3 kg (Approx. 13.9 lb)
Canon FINE Cartridge	Total 1472 nozzles (BK 320 nozzles, C/M/Y each 384 nozzles)

■ Trademarks

- Windows is a trademark or registered trademark of Microsoft Corporation in the U.S. and/or other countries.
- Windows Vista is a trademark or registered trademark of Microsoft Corporation in the U.S. and/or other countries.
- Internet Explorer is a trademark or registered trademark of Microsoft Corporation in the U.S. and/or other countries.
- Mac, Mac OS, macOS, OS X, AirPort, App Store, AirPrint, the AirPrint logo, Safari, Bonjour, iPad, iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Google Cloud Print, Google Chrome, Chrome OS, Chromebook, Android, Google Play, Google Drive, Google Apps and Google Analytics are either registered trademarks or trademarks of Google Inc.

CANON SINGAPORE PTE. LTD.

www.canon-asia.com

The latest information of the address is available at
Canon local website.

Call Center: (021) 2664 8999

Imported by:
DATASCRIP
Jl. Selaparang Blok B-15 Kav.9
Kompleks Kemayoran
Jakarta 10610
Tel : (62-21) 6544515
Fax : (62-21) 6544811-13
Email : info@datascrip.co.id
Website : www.canon.co.id